ASSEMBLY INSTRUCTIONS

MOD: LEONARDO

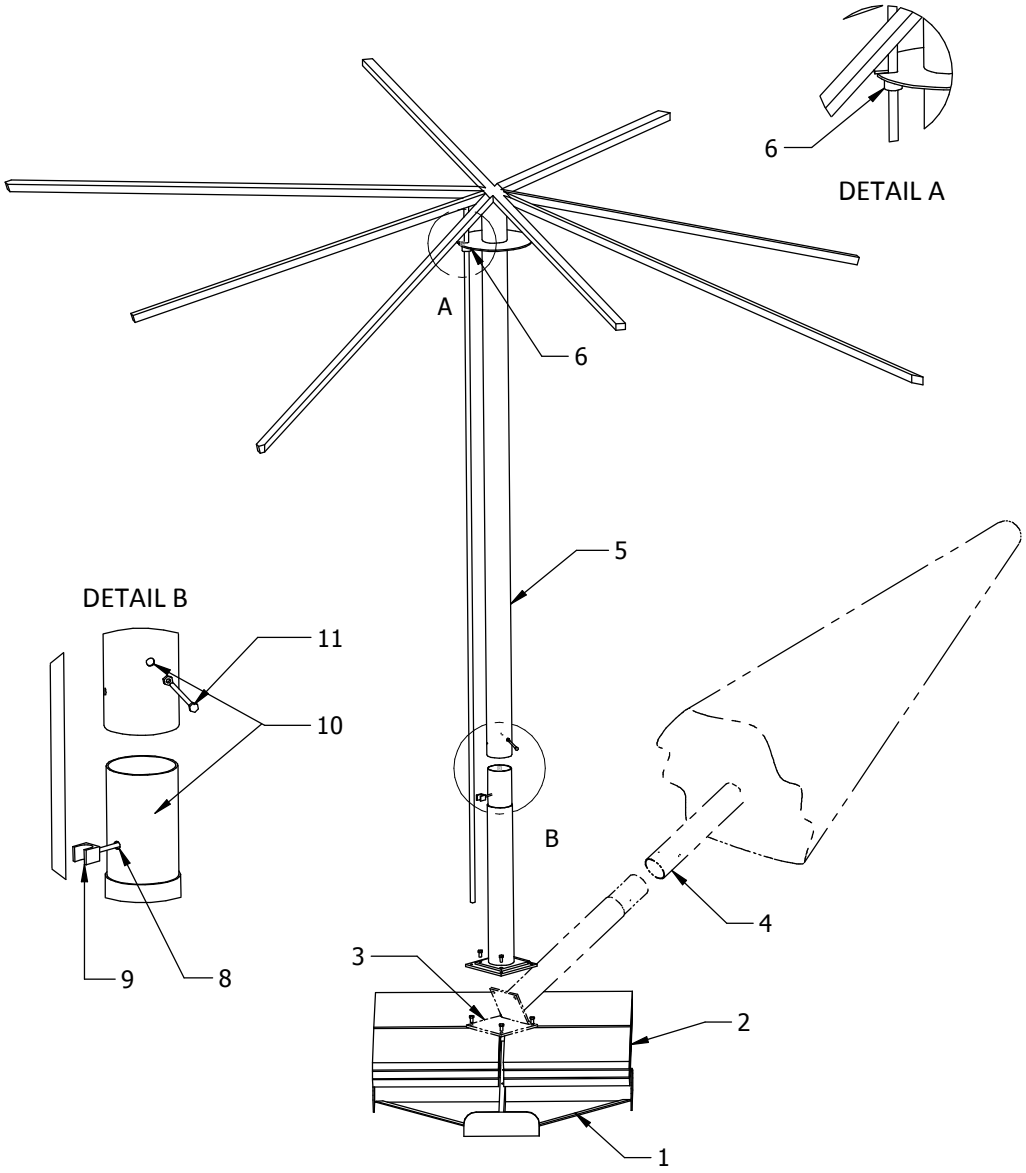

ASSEMBLY INSTRUCTIONS IN SUCCESSION

1. SEAT THE BASE IN THE CHOSEN PLACE
2. PLACE THE PLATES INTO THE BASE
3. FIX THE TUBE TO THE BASE
4. INSERT THE PARASOL INTO THE TILTED TUBE FIXED TO THE BASE
5. REPOSITION THE PARASOL VERTICALLY AND FIX THE TWO SCREWS TO THE BASE
6. OPEN CAREFULLY THE PARASOL, PULLING DOWNWARDS THE ROD, HOOKING IT TO ROD-STOP
7. SET THE POSITION OF THE PARASOL WITH THE BASE
8. BORE A HOLE INTO THE TUBE WITH A 7 MM ∅ DRILL BIT, IN CORRESPONDENCE TO THE LOWER HOLE OF THE POLE
9. INSERT THE SAFETY PIN WITH THE CLIP, FIX WITH NUT AND HOOK THE VERTICAL ROD TO THE CLIP
10. BORE A HOLE INTO THE TUBE WITH A 7 MM ∅ DRILL BIT, IN CORRESPONDENCE TO THE UPPER HOLE OF THE POLE
11. INSERT THE SAFETY PIN AND FIX WITH NUT